



(a) Protective barrier - BS 5837 Figure 2

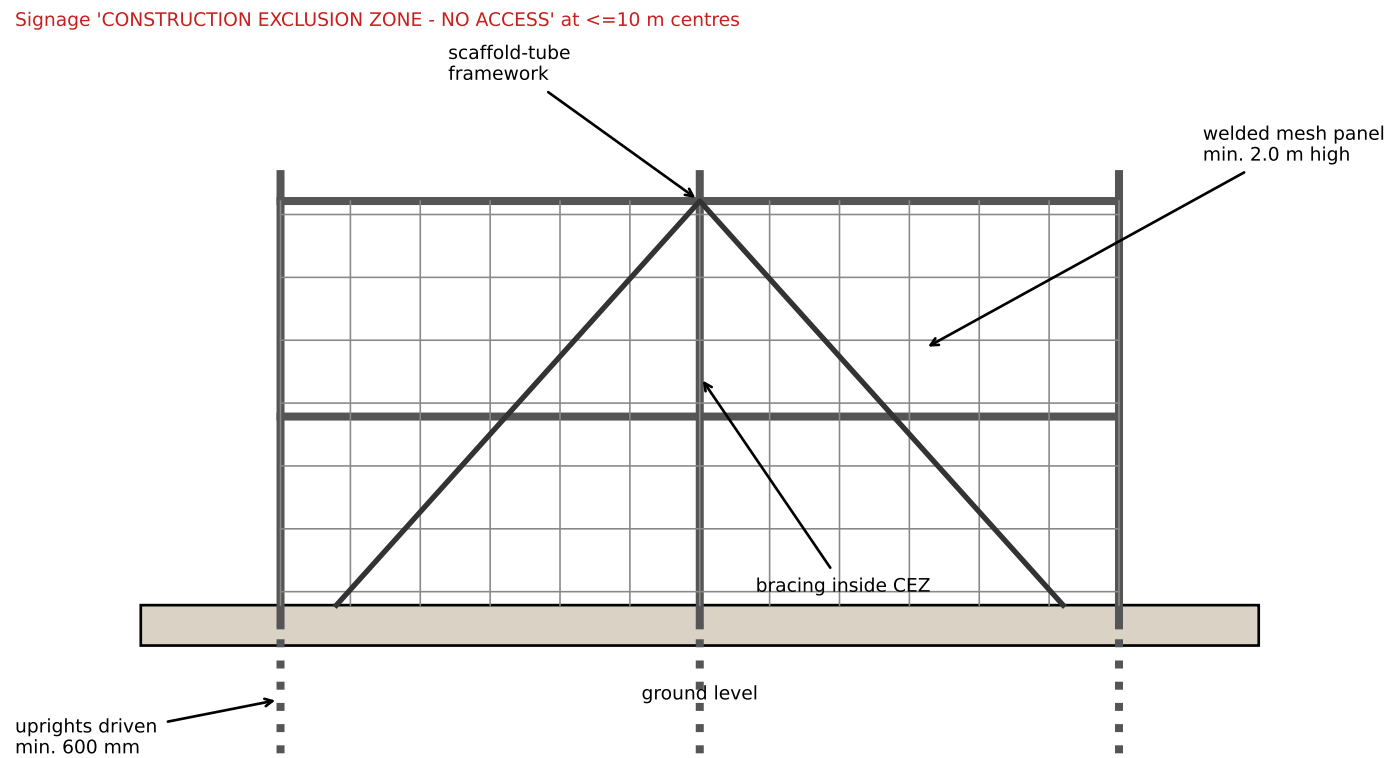


(b) Temporary ground protection within RPA

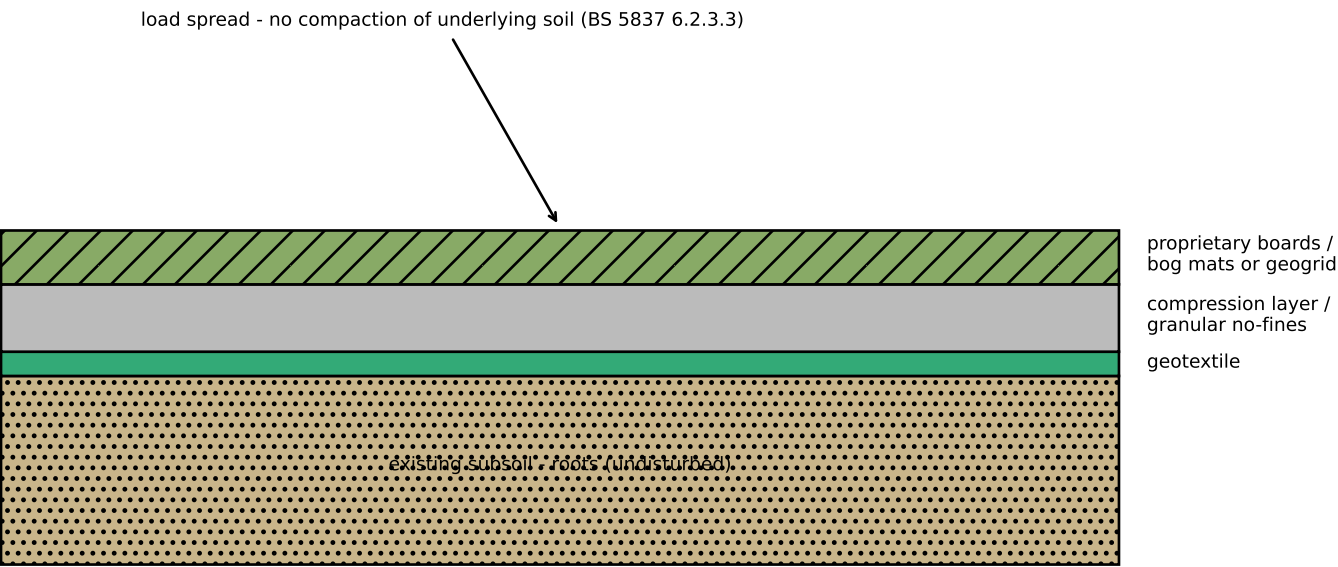

Where the RPA is overlain by retained hard standing, retain it in place as ground protection for as long as practicable.

(c) No-dig surfacing within RPA (BS 5837 cl. 7.4)

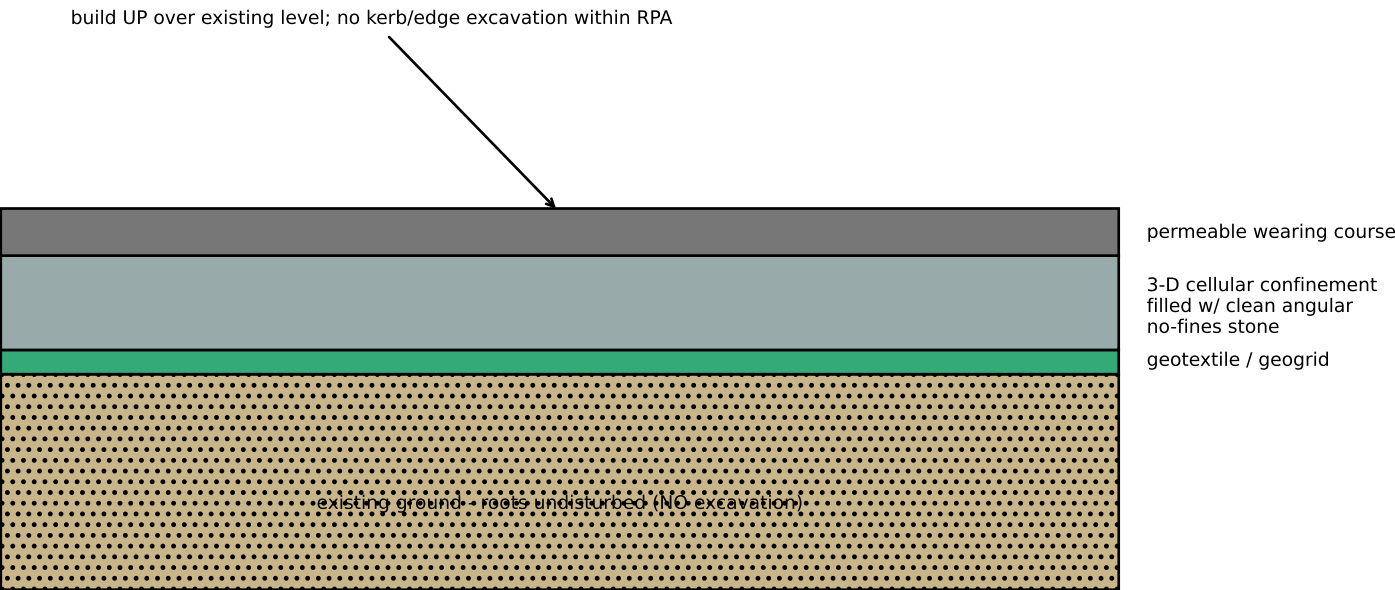

(d) Root & services protocol

- Any excavation within/at the margin of an RPA by hand or air-spade under arboricultural supervision.
- Roots < 25 mm may be pruned to a side branch with a sharp tool; roots ≥ 25 mm retained - stop and consult the arboriculturist before any severance (NJUG Vol.4).
- Exposed roots wrapped in dry hessian; backfill with sharp sand (not builders' sand) / clean granular fill.
- Service crossings of an RPA by trenchless means (thrust-bore) beneath the rooting zone; launch/reception pits outside the RPA; NO open-cut trenching within any RPA.
- No storage, spoil, fuel, mixing, fires or level changes within any CEZ / RPA.
- Details indicative of specification; not to scale. Read with the AMS (DC/26/0597) and GF-TPP-001/003/004.